# Chrome Ceiling-to-floor Cable Display Kit

## Assembly Information

#### Contents

| Cable Kit Size | Top Fixings | Bottom<br>Fixings | Cable   | Single Panel<br>Clips | Double<br>Panel Clips | Poster<br>Holders |
|----------------|-------------|-------------------|---------|-----------------------|-----------------------|-------------------|
| W1 x H1        | 2           | 2                 | 2 x 3 m | 4                     | 0                     | 1                 |
| W1 x H2        | 2           | 2                 | 2 x 3 m | 8                     | 0                     | 2                 |
| W2 x H1        | 3           | 3                 | 3 x 3 m | 4                     | 2                     | 2                 |
| W2 x H2        | 3           | 3                 | 3 x 3 m | 8                     | 4                     | 4                 |
| W3 x H1        | 4           | 4                 | 4 x 3 m | 4                     | 4                     | 3                 |
| W3 x H2        | 4           | 4                 | 4 x 3 m | 8                     | 8                     | 6                 |
| W4 x H1        | 5           | 5                 | 5 x 3 m | 4                     | 6                     | 4                 |
| W4 x H2        | 5           | 5                 | 5 x 3 m | 8                     | 12                    | 8                 |

### Cable Distances for Poster Holders

| Poster Holder Size | Distance Between Outer Cables (1 Wide) | Distance Between Outer & Inner Cables (2 Wide) | Distance Between Inner Cables (3 or More Wide) |
|--------------------|--|--|--|
| A5 Portrait        | 161 mm                                 | 162 mm   | 162 mm   |
| A4 Portrait        | 223 mm                                 | 224 mm   | 224 mm   |
| A4 Landscape       | 310 mm                                 | 311 mm   | 311 mm   |
| A3 Portrait        | 310 mm                                 | 311 mm   | 311 mm   |
| A3 Landscape       | 433 mm                                 | 434 mm   | 434 mm   |
| A2 Portrait        | 426 mm                                 | 427 mm   | 427 mm   |
| A2 Landscape       | 600 mm                                 | 601 mm   | 601 mm   |
| A1 Portrait        | 600 mm                                 | 601 mm   | 601 mm   |

### Warnings

- Please choose fixings suitable for the surfaces you are attaching the cable kit to.
- If you are in any doubt, consult a qualified professional.
- Where stated, all measurements are approximate.
- Acrylic items should only be cleaned with a duster or a clean dust-free cloth.
- NEVER use detergents or other cleaning products as this can adversely affect the acrylic material.

CD-06300-CH-LG **VERSION 1.0** 06.11.17

**CALL FREE** 0800 834 782


**EMAIL** ONLINE

sales@shopfittingwarehouse.co.uk www.shopfittingwarehouse.co.uk




## Assembly Instructions


### Ceiling-to-floor Fittings

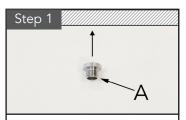

 
Unscrew top fixing (A) and screw to ceiling.




Screw part (B) onto part (A).

 


Feed the cable through part (C) and into part (B), depressing the 'clutch' to allow cable entry.

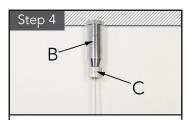


Attach part (C) to part (B) and tighten fully.

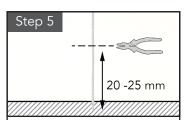

 
Cut the cable to the required length (usually 20 - 25 mm less than the ceiling-to-floor height).



 Unscrew part (F) and part (E) from part (D) N.B. Part (E) works on a reverse thread.




Screw part (F) to the floor.

 


Screw part (E) onto part (F) with 2 x turns anti-clockwise.



 
Screw part (D) onto part (E) with half a turn.



 Feed the cable into part (D), depress the clutch to allow cable entry.




 Tension the cable by turning part (E) anti-clockwise whilst holding part (D) in place.




Your cable kit is now ready to use.


#### Poster Holders

 

 Loosen grub screws in the single panel clip, position on cable and tighten grub screw (A).



 
Insert poster into single panel clip and tighten grub screw (B).




Repeat steps 1 and 2 for all outer cables.



 
For all inner cables (kits more than 1 wide) use double panel clips.



Loosen grub screws, position cable in central slot and tighten grub screw (C).

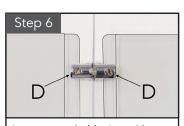

 Insert poster holder into either side of double panel clip and tighten grub screw (D).



Repat steps 5 and 6 for all inner cables.



The finished result is now ready for your signs and posters.

CD-06400-CH-LG VERSION 1.0 06.11.17 CALL FREE EMAIL ONLINE

0800 834 782

sales@shopfittingwarehouse.co.uk www.shopfittingwarehouse.co.uk

