

Contents

Cable Kit Size	Top Fixings	Bottom Fixings	Cable
3 m Kit	1	1	3 m
4 m Kit	1	1	4 m

 
Ceiling-to-floor Fittings

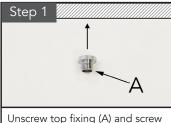


Unscrew top fixing (A) and screw to ceiling.

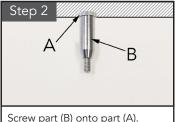


Screw part (B) onto part (A).




Feed the cable through part (C) and into part (B), depressing the 'clutch' to allow cable entry.

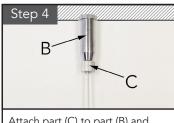

 
Attach part (C) to part (B) and tighten fully.




 
Cut the cable to the required length (usually 20 - 25 mm less than the ceiling-to-floor height).



  
Unscrew part (F) and part (E) from part (D) N.B. Part (E) works on a reverse thread.






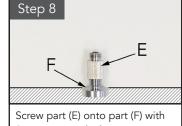


2 x turns anti-clockwise.

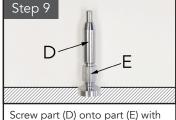

half a turn.

 

Feed the cable into part (D), depress the clutch to allow cable

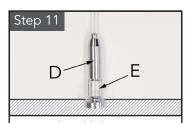

Tension the cable by turning part (E) anti-clockwise whilst holding part (D) in place.



Warnings

- Please choose fixings suitable for the surfaces you are attaching the cable kit to.
- If you are in any doubt, consult a qualified professional.
- Where stated, all measurements are approximate.