 
 

Contents


Top Fixing (2 Parts)	Bottom Fixing (3 Parts)	Cable	Screws	Wall Plugs	Allen Key
1	1	4 m	2	2	1


Wall-Mount Fittings






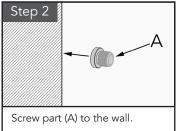


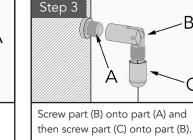


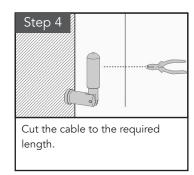


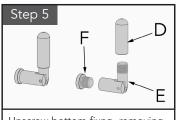


Unscrew bottom fixng, removing part (E) and (F) from part (D).

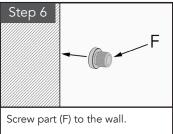


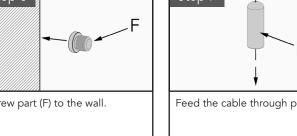

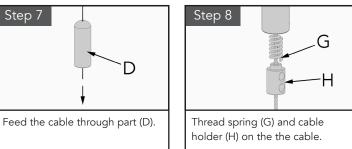


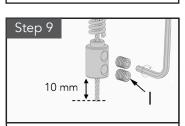


Screw in grubs screws (I) ensuring you leave 10 mm of cable free at the end.

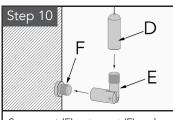

Screw part (E) onto part (F) and then screw part (D) onto part (E).

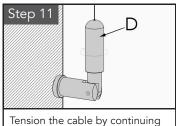

to screw part (D) until suitable tension is achieved.

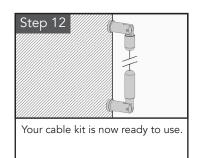

Warnings

- Please choose fixings suitable for the surfaces you are attaching the cable kit to.
- If you are in any doubt, consult a qualified professional.
- Where stated, all measurements are approximate.

0603401 **VERSION 1.0** 06.11.17

CALL FREE

0800 834 782

EMAIL ONLINE sales@shopfittingwarehouse.co.uk www.shopfittingwarehouse.co.uk

