Gridwall Mesh 'H' Gondola Stand


Assembly Guide

This guide covers the assembly of the Gridwall Mesh 'H' Gondola Stands. 2035101 (H1280 mm), 2035201 (H1585 mm) and 2035301 (H1890 mm)

Shopfitting Warehouse, 11/13 Bridge Street, Bailie Gate Industrial Estate,
Sturminster Marshall, Dorset. BH21 4DB, UK.
e: sales@shopfittingwarehouse.co.uk
w: www.shopfittingwarehouse.co.uk
t: 0800 834 782

shopfitting warehouse

Display and Storage for you

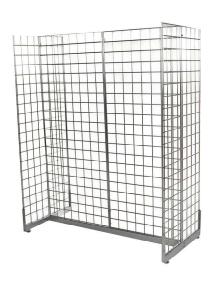

Components

Frame Centre	x 1
Frame Ends	x 2
Frame Feet	x 4
Frame Screws	x 4
Grid Mesh Panels	x 4
Nuts, Bolts & Washers	x 10
Joining Clips	x 6


Safety

- + Best constructed by 2 persons
- + Construct within ample space and on a solid flat surface
- + Check all fixing points are secure before use in a public environment




1. Assemble Base

Screw the base together into the 'H' shape using the 4 screws provided and then screw the adjustable feet in the corners. Do not over-tighten.

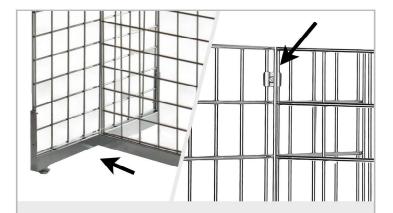


3. Position Centre Panels

Position a panel perpendicular to an end frame and fix it at the top and bottom using the joining clips. Repeat with the other centre panel.

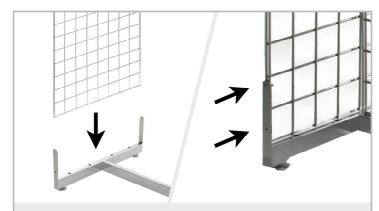

2. Fit End Panels

Position one of the mesh panels in to one end of the frame and fix with 4 of the nuts, bolts and washers supplied. Repeat with other end panel.

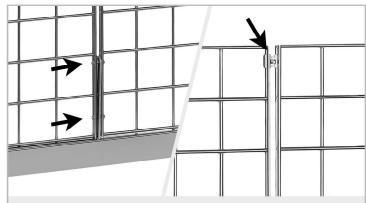

4. Secure Centre Panels

Once both centre panels are in place, fit together throught the frame with two bolts, then at the top with a joining clip.