

Thank you for purchasing this product.

Please remember to check that you have all component parts before beginning assembly.

N.B. These instructions are for wall units, but the same principals apply to our gondola shelving and end bays.


Step 1:

Locate the baseleg rear lug and block into the bottom 'H Slots' of the upright as shown.



Step 2:

Using a rubber mallet, firmly knock the baseleg upwards locking into position until flush.

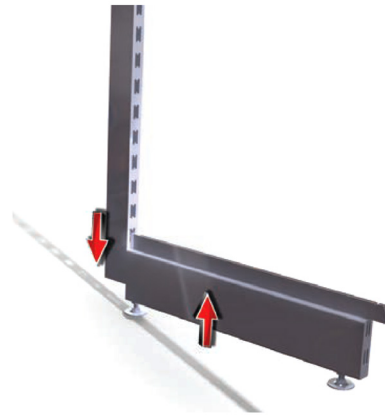

Step 3:

Repeat steps 1 and 2 until you have two 'L' shaped uprights.




Step 4:

Connect both 'L' shaped uprights together by fitting a back panel into the bottom 'H' slots of the uprights. Now check levels are correct by adjusting the foot discs as requested.




Step 5:

Fit the plinth skirting into position by slotting it between the front capping on the base legs.

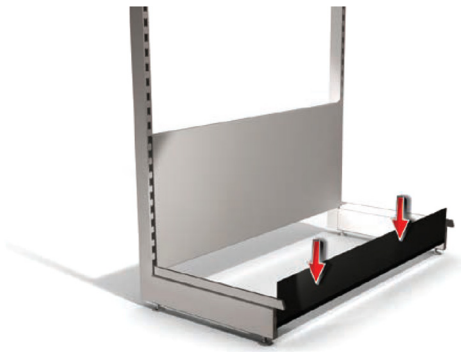

Step 6:

Fit the base shelf onto the base leg runners. Now fit all remaining back panels.

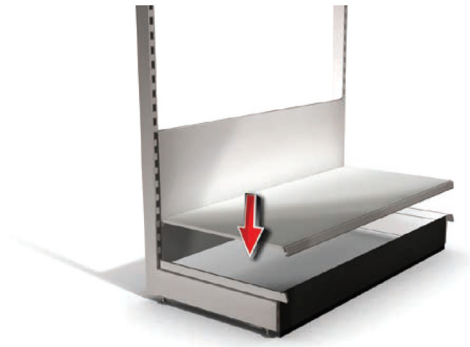


Step 7:

Once the base shelf and back panels are in place the bay should look as below. You are now ready to fit the upper shelves.



Step 8:

Insert a bracket into the upright 'H' slot at an angle as shown below.

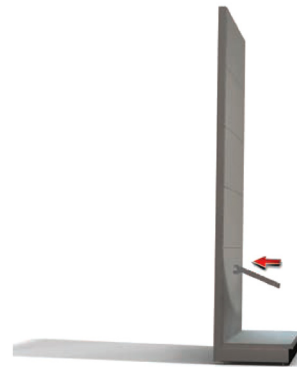

Step 9:

Rotate the bracket upwards until secured in a horizontal position. Brackets can also be positioned at sloping angles if desired.



Step 10:

Repeat step 9 on the opposite upright and then fit a matching shelf onto the pair of brackets.



Step 11:

Repeat steps 8 – 10 until all the upper shelves are in position.



Step 12:

To finish, attach EPOS ticket strips to the front of all shelves.

