


Cube Shelving


— = small panel
— = medium panel

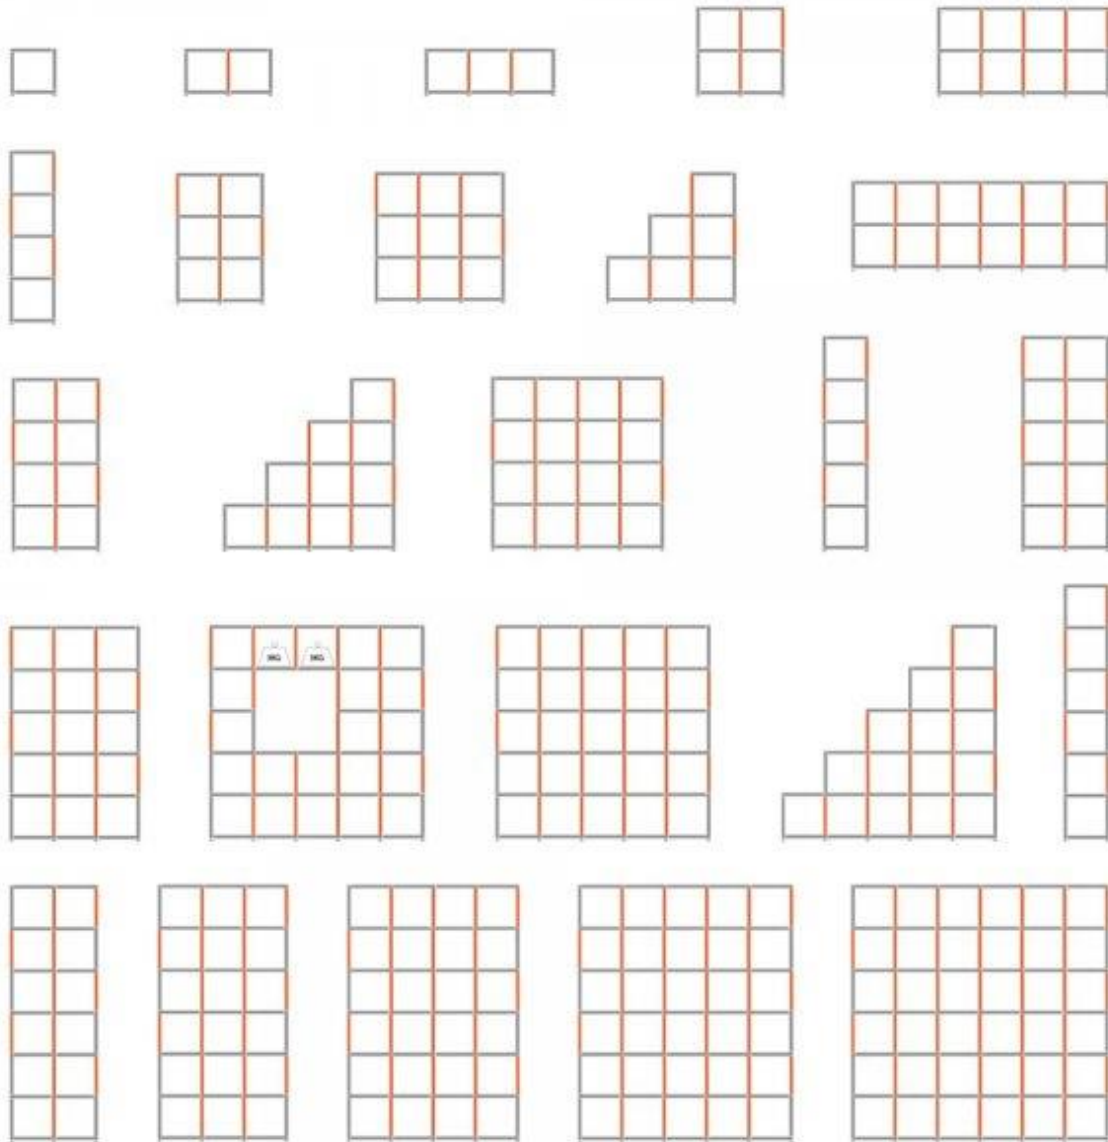

1. Locate your kit from the diagram above to see the configuration of panels
2. Attach feet to the bottom panels (please note 2 feet will need to be attached to the far left upright panel)



3. Starting at the bottom fix the panels together horizontally and vertically using the fixing kits.

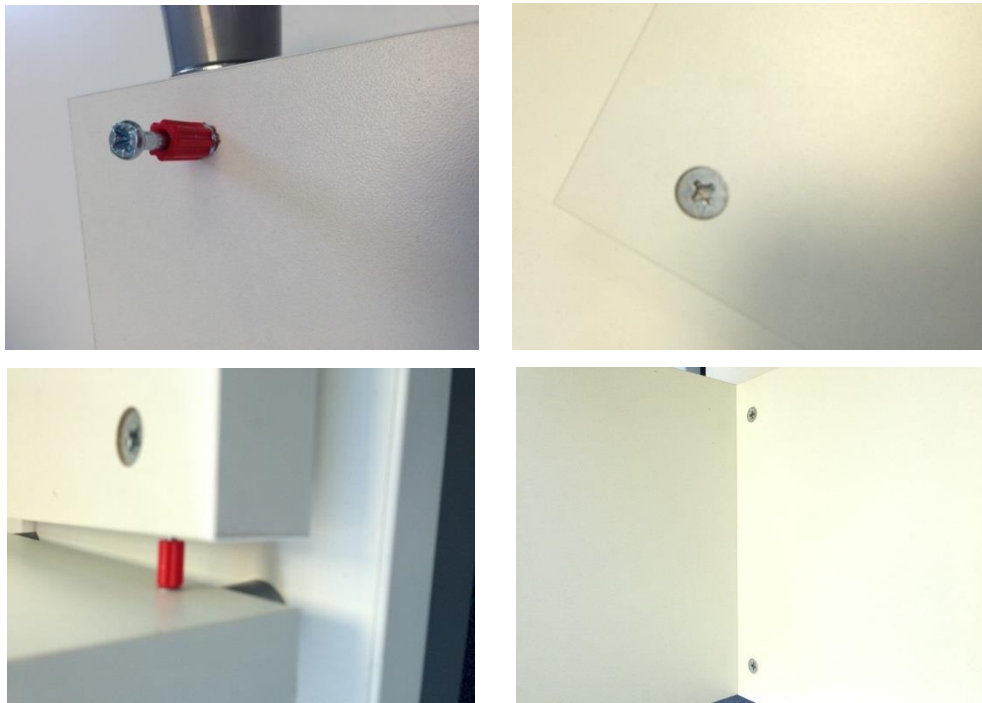

4. Complete the unit with the 'screw caps' and 'hole covers'