


## Contents

Top Fixing ( 2 Parts )	Bottom Fixing ( 2 Parts )	Cable	Screws	Wall Plugs	Allen Key
1	1	4 m	2	2	1


## Ceiling-to-floor Fittings

**Step 1**

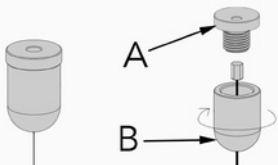


Unscrew top fixing, removing part (B) from part (A).

**Step 2**

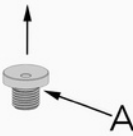


Screw part (A) to ceiling.

**Step 3**

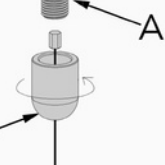


Screw part (B) onto part (A).

**Step 4**

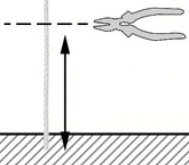


Cut the cable to the required length.

**Step 5**

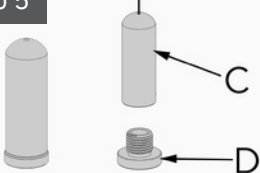


Unscrew bottom fixing, removing part (C) from part (D).

**Step 6**




Screw part (D) to the floor.

**Step 7**

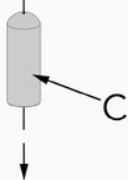


Feed the cable through part (C)

**Step 8**

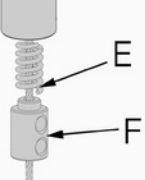


Thread spring (E) and cable holder (F) on the the cable.

**Step 9**

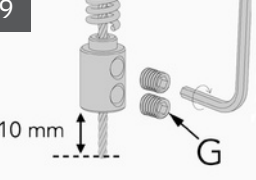


Screw in grubs screws (G) ensuring you leave 10 mm of cable free at the end.

**Step 10**

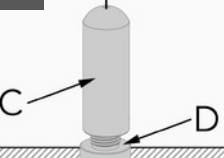


Screw part (C) onto part (D).

**Step 11**

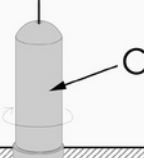

Tension the cable by continuing to screw part (C) until suitable tension is achieved.

**Step 12**



Your cable kit is now ready to use.

## Warnings

- Please choose fixings suitable for the surfaces you are attaching the cable kit to.
- If you are in any doubt, consult a qualified professional.
- Where stated, all measurements are approximate.